



marzocchi

BOMBER58

TUNING GUIDE

SAG SETTING


To achieve the best performance from your Marzocchi suspension, adjust the air pressure to attain your proper sag setting. Sag is the amount your suspension compresses under your weight and riding gear. Sag range should be set to 15-20% **of total fork travel**.

Make sure to set sag with the LSC adjuster in the full counter-clockwise (OPEN) position, see page 5.

Suggested Sag Measurements

Travel	15% sag (Firm)	20% sag (Plush)
203 mm (8in)	30 mm (1.2in)	41 mm (1.6in)

Your fork has a 4 digit ID code on the back of the lower leg. Use this number at www.Marzocchi.com to find out more information about your fork.

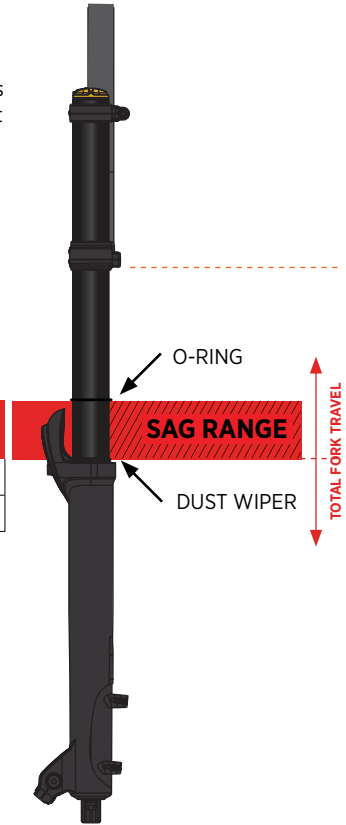



The recommended settings in this tuning guide are designed to be a **starting point**, in order to get you out on your first ride in as few steps as possible. Consult your bike manufacturer's instructions for setup recommendations.

As you ride and get used to your new fork, adjust your settings as needed. Detailed information and videos can be found in the online owner's manual.

Suggested Starting Points for Setting Sag

Rider Weight (lbs)	Rider Weight (kgs)	BOMBER 58 Pressure (psi)
120-130	54-59	49
130-140	59-64	53
140-150	64-68	57
150-160	68-73	61
160-170	73-77	65
170-180	77-82	69
180-190	82-86	73
190-200	86-91	76
200-210	91-95	80
210-220	95-100	84
220-230	100-104	88
230-240	104-109	92
240-250	109-113	96



Do not exceed maximum air pressure:
BOMBER 58 maximum air pressure is **120 psi**.

REBOUND ADJUSTMENT

The rebound adjustment is dependent on the air pressure setting. For example, higher air pressures require lower rebound settings. Use your air pressure to find your rebound setting.


Turn your rebound knob to the closed position (full clockwise) until it stops. Then back it out (counter-clockwise) to the number of clicks shown in the table below.

REBOUND

Rebound controls the rate of speed at which the fork extends after compressing.



Rider Weight (lbs)	Rider Weight (kgs)	BOMBER 58
120-130	54-59	13
130-140	59-64	12
140-150	64-68	11
150-160	68-73	10
160-170	73-77	9
170-180	77-82	8
180-190	82-86	7
190-200	86-91	6
200-210	91-95	5
210-220	95-100	4
220-230	100-104	3
230-240	104-109	2
240-250	109-113	1

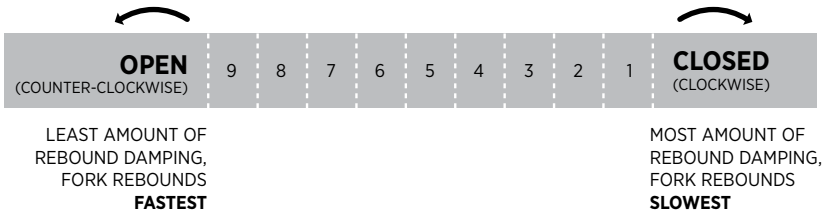

GRIP COMPRESSION ADJUSTER

Use this diagram as a starting point for your compression adjuster.

Turn your compression adjuster to the closed position (full clockwise) until it stop. Then back it out (counter-clockwise) to the number of clicks shown below.

Low-speed compression adjustment is useful to control fork performance during rider weight shifts, G-outs, and other slow inputs.



OPEN
8 CLICKS

LEAST AMOUNT
OF COMPRESSION
DAMPING; FORK
COMPRESSION
LIGHTEST




LOW-SPEED COMPRESSION (LSC)

CLOSED
(FULL CLOCKWISE)

MOST AMOUNT
OF COMPRESSION
DAMPING; FORK
COMPRESSION
FIRMEST

INSTALL THE FRONT WHEEL

1. Install the front wheel into the dropouts and slide the axle through the dropouts and hub.
2. Using a 5mm hex wrench, torque the axle to 2.15 Nm (19 in-lb).
3. Torque the two pinch bolts on the rider's left dropout to 2.15 Nm (19 in-lb).
4. Compress the fork a couple of times to let the right side of the dropout float and settle to its low-friction point.
5. Torque the two pinch bolts on the rider's right dropout to 2.15 Nm (19 in-lb).

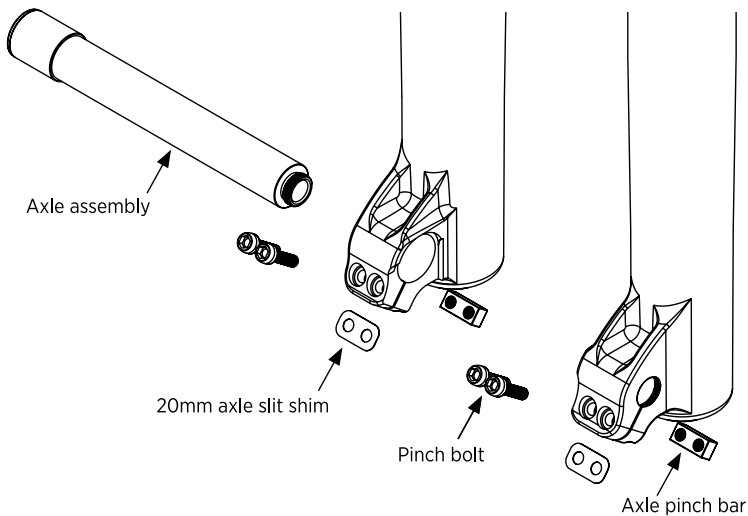

WARNING: Failure to secure the axle properly can cause the wheel to become detached from the bicycle, resulting in **SERIOUS INJURY OR DEATH**.

**SEE ADDITIONAL INFORMATION AND VIDEOS:
MARZOCCHI.COM**

ADDITIONAL TUNING OPTIONS

CLIP-ON VOLUME SPACERS

Changing volume spacers in the BOMBER 58 fork is an easy internal adjustment that allows you to change the amount of mid stroke and bottom out resistance.

If you have set your sag correctly and are using full travel (bottoming out) too easily, then you could install one or more spacers to increase bottom out resistance.

If you have set your sag correctly and are not using full travel, then you could remove one or more spacers to decrease bottom out resistance.


Installation procedure and tuning options are available online at: www.Marzocchi.com

<i>BOMBER 58 Volume Spacer Configurations</i>		
Travel	Volume Spacers Factory Installed	*Max Volume Spacers
203	4	7



*Do not exceed the Max Volume Spacers number, as this can damage your fork.

TYPICAL AIR SPRING CURVES

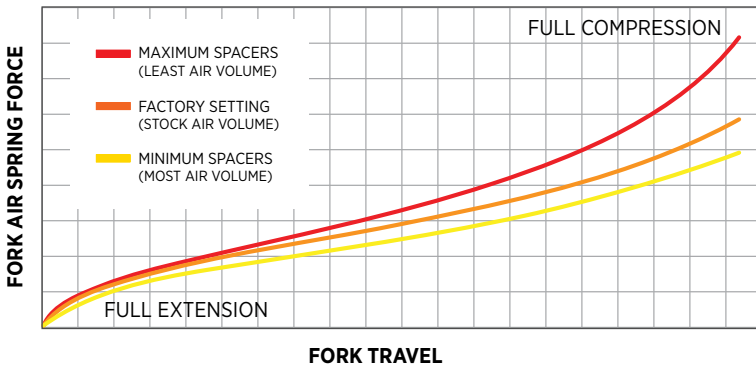

NOTES





marzocchi

©MARZOCCHI. 2017 // 1.800.369.7469
915 Disc Drive, Scotts Valley, CA 95066 USA
605-00-174 REV A

MARZOCCHI.COM